




DSL-300T

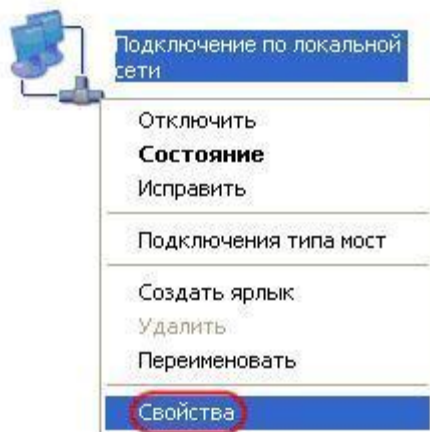


1

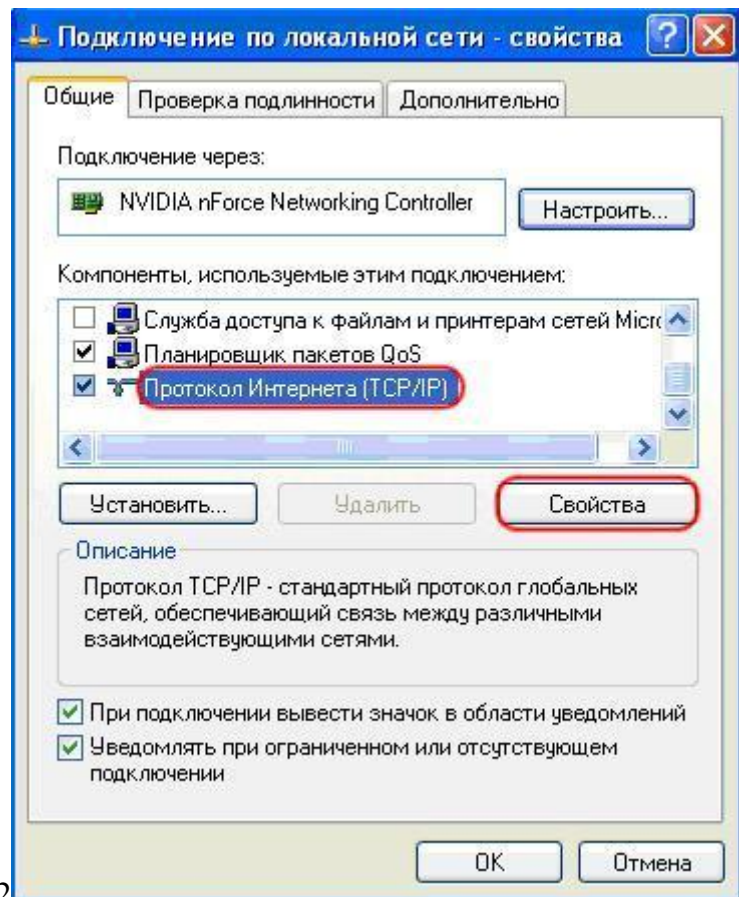


2

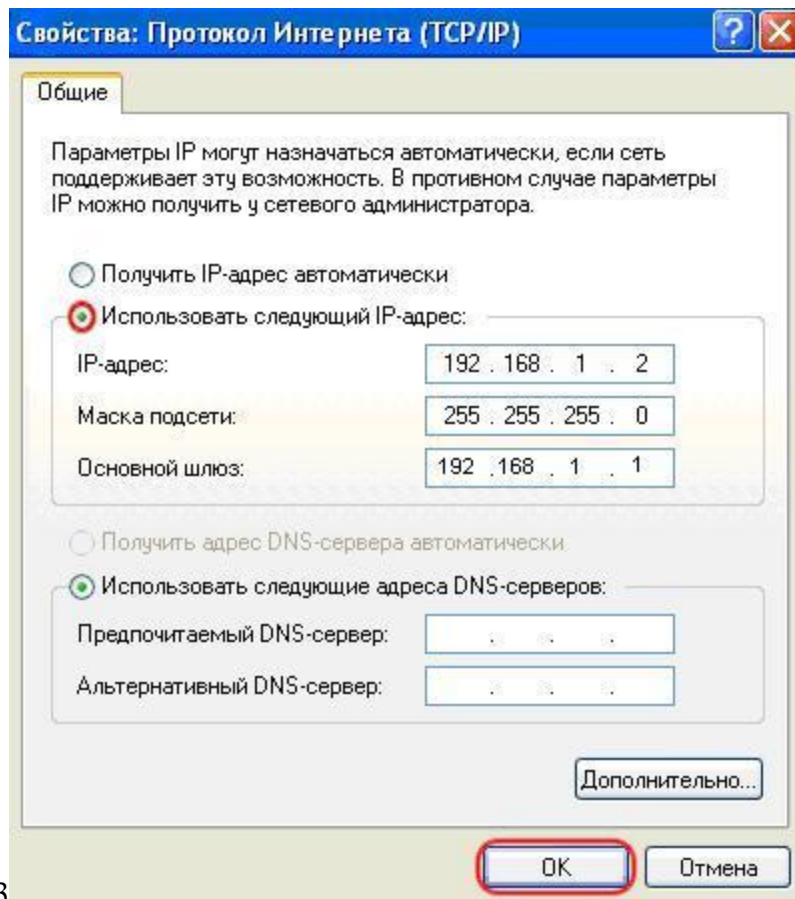


3

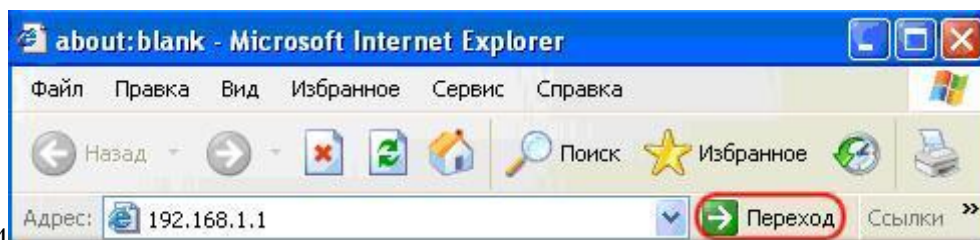


4

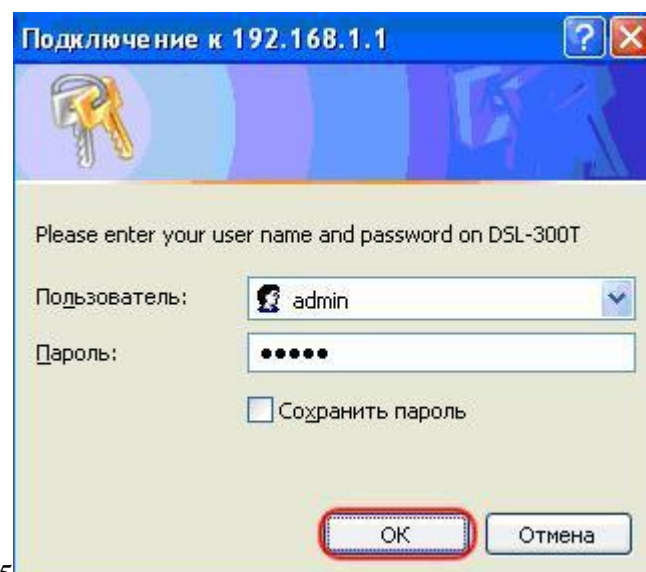

5

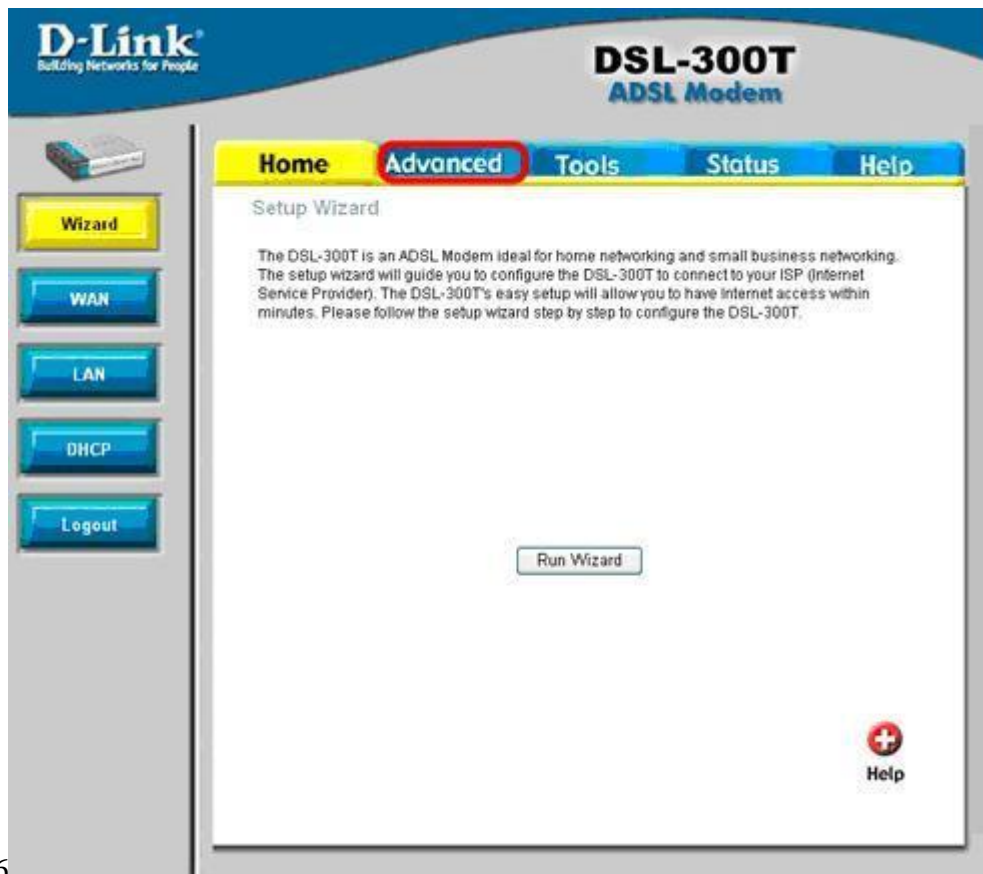

6

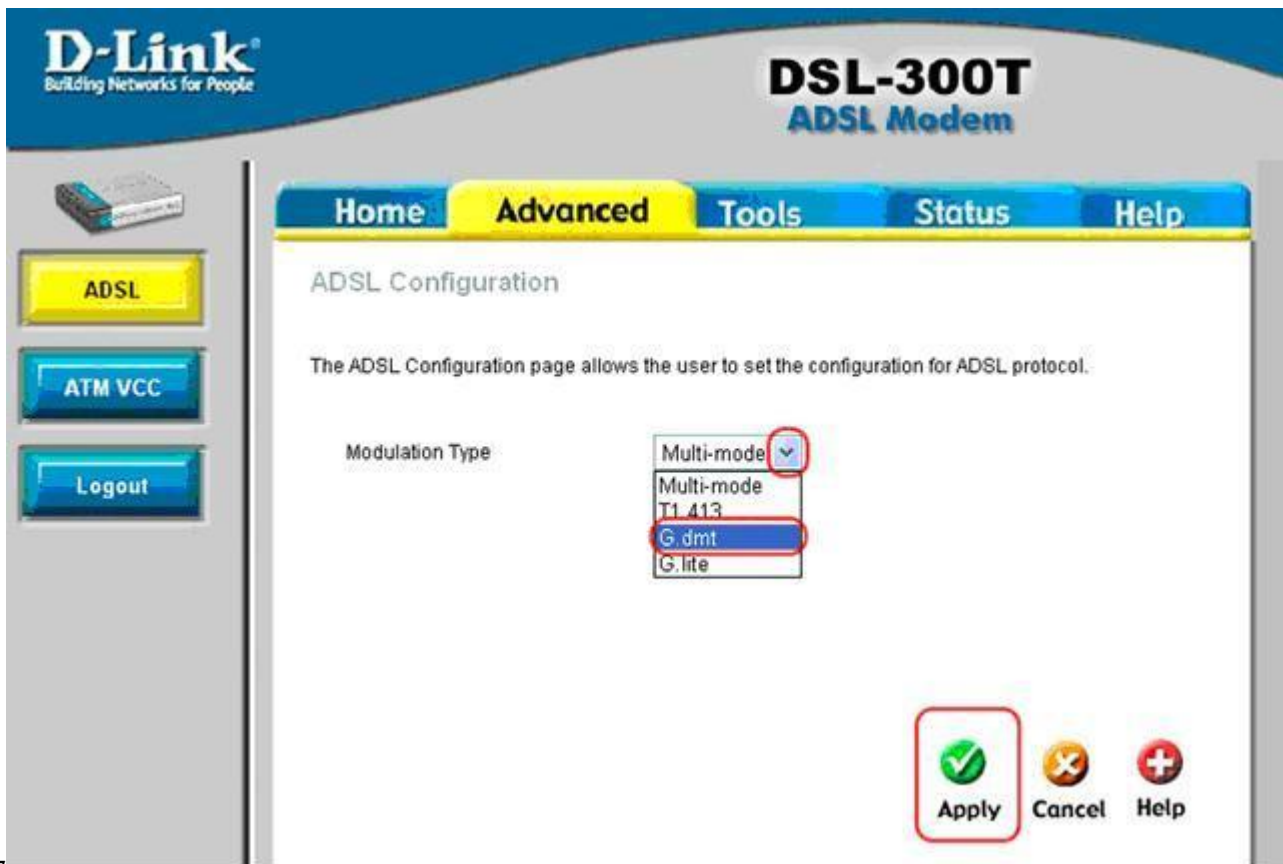

7

Home Advanced Tools Status Help

ATM VC Setting

PVC PVC0

VPI

VCI

Virtual Circuit Enabled

WAN Settings

Please select the appropriate options to connect to your ISP.

Static IP Address Choose this option to set static IP information provided to you by your ISP.

PPPoE/PPPoA Choose this option if your ISP uses PPPoE/PPPoA. (For most DSL users)

Bridge Mode Choose this option if your ISP uses Bridge Mode.

Bridge Mode

Connection Type 1483 Bridged IP LLC

ATM

Service Category UBR

PCR kbps

SCR kbps

Apply Cancel Help

8

D-Link
Building Networks for People

DSL-300T
ADSL Modem

Home Advanced Tools Status Help

DHCP Settings

The device can be setup as a DHCP Server to distribute IP addresses to the LAN network.

No DHCP Choose this option. The IP address must be manually assigned at each device connected to DSL-300T.

DHCP Server Choose this option to setup as a DHCP server to distribute IP addresses to the LAN network.

Apply Cancel Help

9

D-Link
Building Networks for People

DSL-300T
ADSL Modem

Home Advanced **Tools** Status Help

System Settings

The current system settings can be saved as a file onto the local hard drive.

Save Settings To Local Hard Drive

Save

Load Settings From Local Hard Drive

Обзор...

Load

Note: The system has to be restarted after the configuration is restored.

Save Settings and Reboot the System.

Save and Reboot

Restore To Factory Default Settings

Restore

10

11



