


ZTE 831

• :
- (Google Chrome),
IP- 192.168.1.1 (), ():
):


Username: **Administrator** Password: **qazwsx**

Username: **admin** Password: **admin**

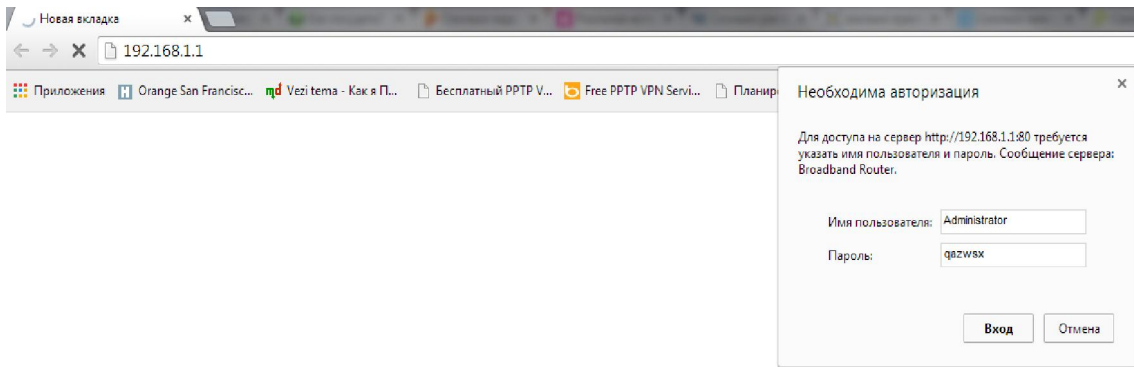

.1

ADSL

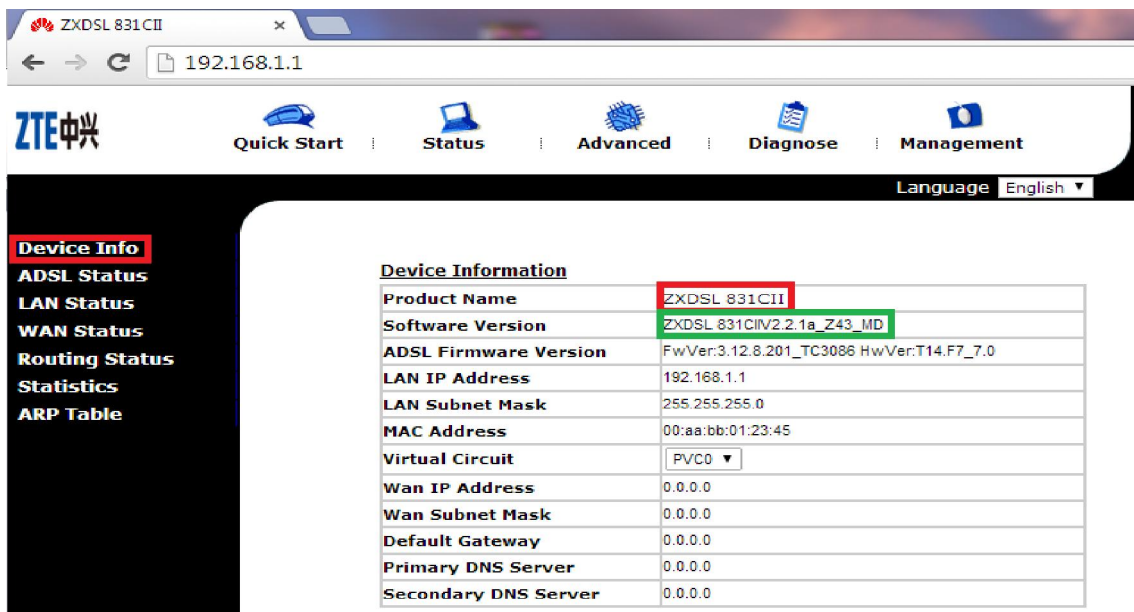


.2

.2 ,
2.2.1a_Z43_MD,
2.2.2d_Z43_MD.

: ZTE 831CII,
ZTE 831CII

. 3.

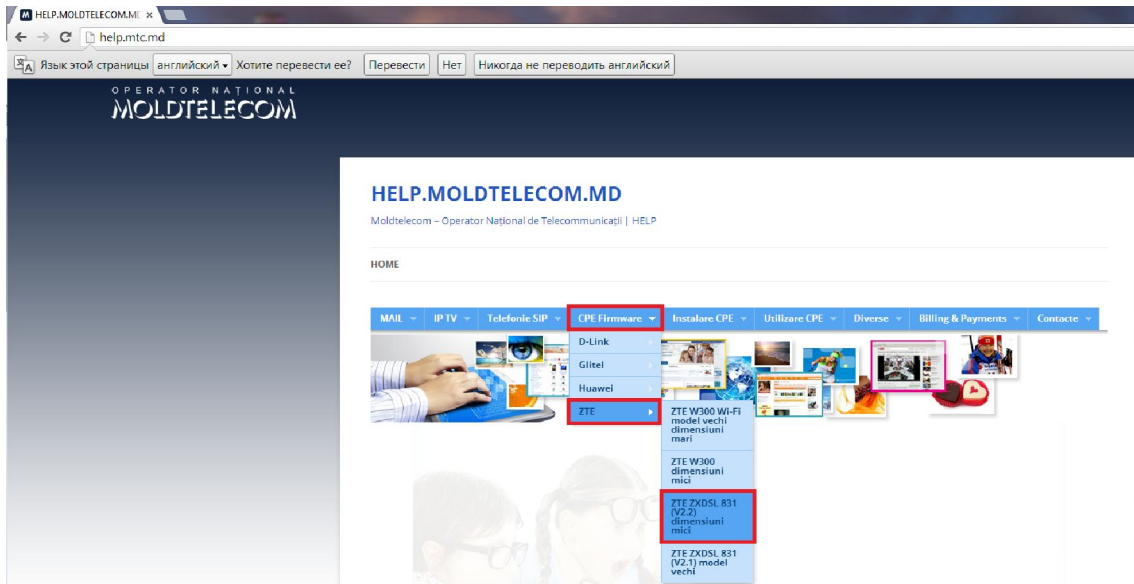


. 3

2.2.2d_Z43_MD

ADSL

ADSL

Management/Update Firmware.

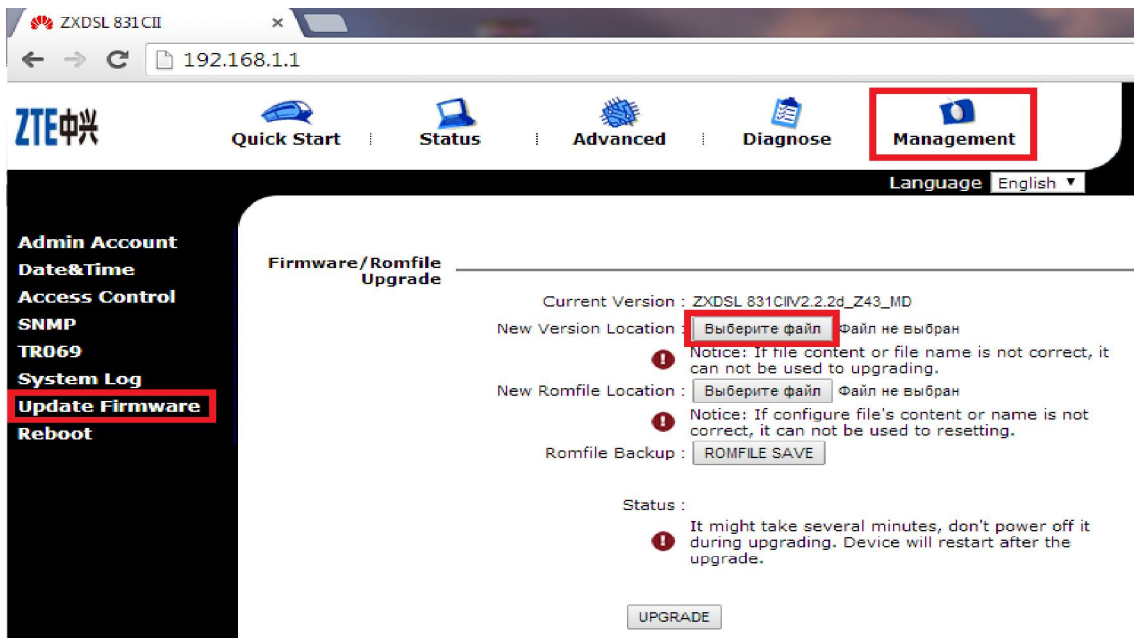


. 4

UPGRADE

90

.4.

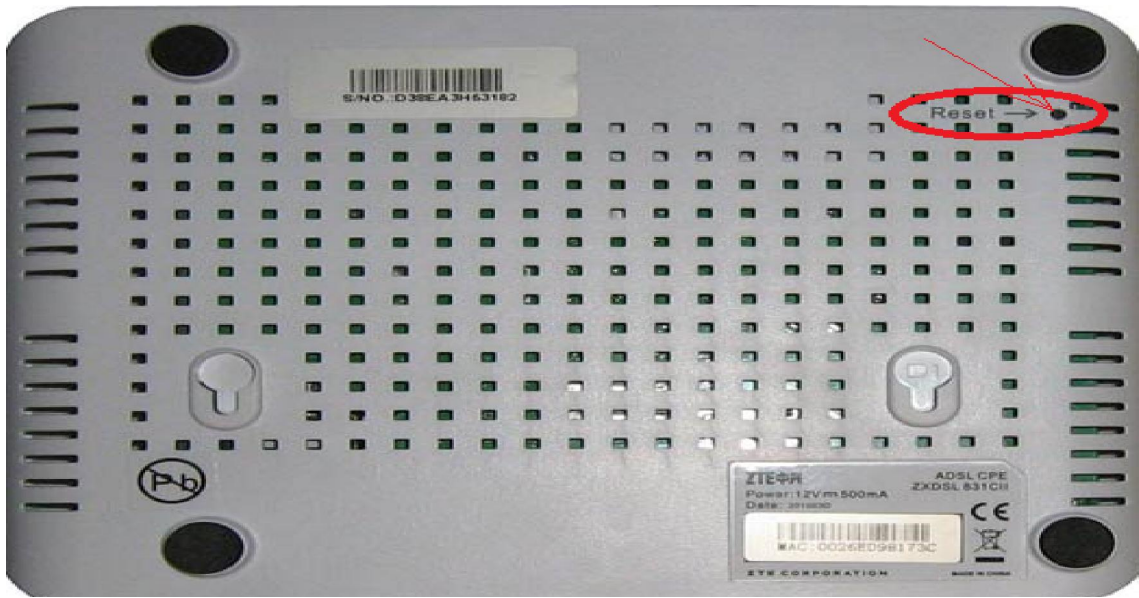

.6

1)

Factory Default Settings

Web-

RESTART.

Tools/Reboot,

.5.

• TR-069:

- ADSL
PVC 0

IP-

: Satus/*WAN Status*

.7.

Wan Connection									
#	Active	VPI/VCI	ATM QoS	ENCAP	NAT	IP Address	Default Route	Status	
PVC0	Yes	1/35	UBR	ENET ENCAP LLC	Disabled	10.18.91.173	Disabled	Up	
PVC1	Yes	0/33	UBR	ENET ENCAP LLC	Enable	92.114.150.214	Enable	Up	
PVC2	-	-/-	-	-	-	-	-	-	-
PVC3	-	-/-	-	-	-	-	-	-	-
PVC4	-	-/-	-	-	-	-	-	-	-
PVC5	-	-/-	-	-	-	-	-	-	-
PVC6	-	-/-	-	-	-	-	-	-	-
PVC7	-	-/-	-	-	-	-	-	-	-

.7

IP-
Activated TR-069 Client

: *Management/TR - 069*
URL: <http://acs.mtc.md:7547/acs/>.

.8

ZXD5L 831CII 192.168.1.1

ZTE中兴 Quick Start | Status | Advanced | Diagnose | **Management** Language English

Admin Account
Date&Time
Access Control
SNMP
TR069
System Log
Update Firmware
Reboot

TR069 Setup
TR069: Activated Deactivated

Login ACS
URL:
User Name:
Password:

ACS Connection Request
Path:
Port:
User Name:
Password:

Periodic Inform
Periodic Inform: Activated Deactivated
Interval(s):